AM/FM Digital Alarm Clock Radio

CLR-2618

Instruction manual
Bedienungsanleitung
Manuel d'instructions
Manuale d'istruzioni
Manual de instrucciones
Manual de instruções

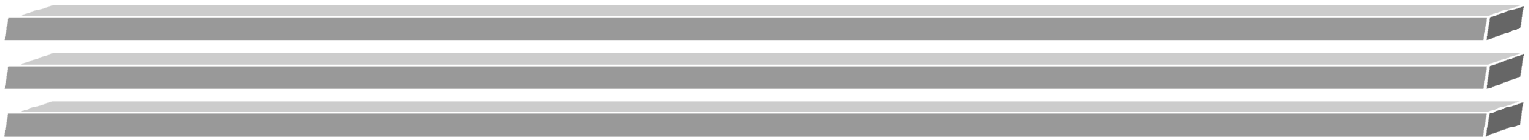

Roadstar is a registered Trademark of Roadstar S.A. - Switzerland All rights reserved

INDEX

English	Page	1
Deutsch	Seite	9
Français	Page	17
Italiano	Pagina	25
Español	Página	33
Portuguese	Página	41

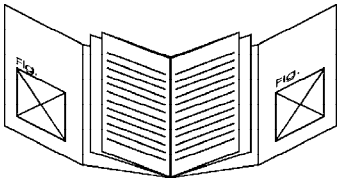

- Your new unit was manufactured and assembled under strict ROADSTAR quality control.
  Thank-you for purchasing our product for your music enjoyment.
  Before operating the unit, please read this instruction manual carefully. Keep it also handy for further future references.

- Votre nouvel appareil a été fabriqué et monté en étant soumis aux nombreaux tests ROADSTAR.
  Nous espérons que cet appareil vous donnera entière satisfaction.
  Avant de vous adonner à ces activités, veuillez lire attentivement ce manuel d'instructions.
  Conservez-le à portée de main à fin de référence ultérieure.

- Vuestro nuevo sistema ha sido construido según las normas estrictas de control de calidad ROADSTAR.
  Le felicitamos y le damos las gracias por su elección de este aparado. Por favor leer el manual antes de poner en funcionamiento el equipo y guardar esta documentación en case de que se necesite nuevamente.

- Ihr neues Gerät wurde unter Beachtung der strengen ROADSTAR-Qualitätsvorschriften gefertigt.
  Wir danken Ihnen für den Kauf unseres Produktes und wünschen Ihnen optimalen Hörgenuss. Bitte lesen Sie diese Bedienungsanleitung durch, und heben Sie sie auf, um jederzeit darin nachschlagen zu können.

- Il vostro nuovo apparecchio é stato prodotto ed assemblato sotto lo stretto controllo di qualità ROADSTAR.
  Vi ringraziamo di aver acquistato un nostro prodotto per il vostro piacere d'ascolto.
  Prima di procedere all'utilizzo dell'apparecchio, leggete attentamente il manuale d'istruzioni e tenetelo sempre a portata di mano per futuri riferimenti.

- Seu novo aparelho foi construido e montado sob o estrito controle de qualidade da ROADSTAR.
  Agradecemos por ter comprado nosso produto para a sua diversão.
  Antes de usar esta unidade é necessário ler com atenção este manual de instruções pare que possa ser usada apropriadamente; mantenha o manual ao seu alcance para outras informações.

CLR-2618

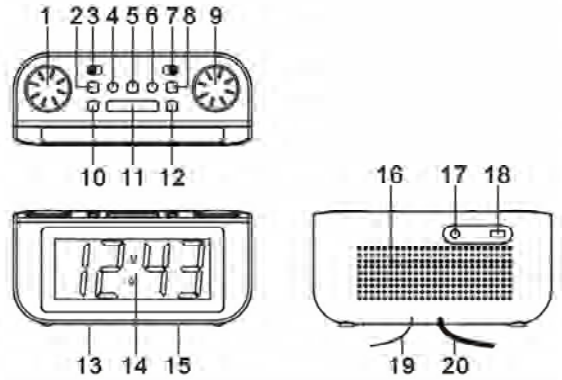

WARNINGS

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user of “dangerous voltage” inside the unit.

To reduce the risk of electric shock, do not remove the cover. No user serviceable parts inside the unit. Refer all servicing to qualified personnel.

230v~

This unit operates on 230V ~ 50Hz. If the unit is not used for a long period of time, remove the plug from the AC mains.

This unit must not be exposed to moisture or rain.

The power switch in this unit is mounted on the secondary circuit and does not disconnect the whole unit from the mains in OFF position.

Ensure all connections are properly made before operating the unit.

This unit should be positioned so that it is properly ventilated. Avoid placing it, for example, close to curtains, on the carpet or in a built-in installation such as a bookcase.

Do not expose this unit to direct sunlight or heat radiating sources.

Make sure the battery is inserted according to the proper polarity.

CLR-2618

AM/FM DIGITAL ALARM CLOCK RADIO

TABLE OF CONTENTS

- LOCATION OF CONTROLS
- POWER SUPPLY
- AC POWER
- SPECIFICATIONS

LOCATION OF CONTROLS

1. VOLUME KNOB
2. TIME SET BUTTON
3. ALARM RADIO/BUZZ SWITCH
4. MINUTE BUTTON
5. ALARM ON/OFF BUTTON
6. HOUR BUTTON
7. AM/FM BAND SWITCH
8. ALARM SET BUTTON
9. TUNING KNOB
10. SLEEP BUTTON
11. SNOOZE BUTTON
12. RADIO ON/OFF BUTTON
13. RATING LABEL
14. LCD DISPLAY
15. BATTERY DOOR
16. SPEAKER
17. LINE IN JACK

18. DISPLAY LOW / HIGH DIMMER
19. FM ANTENNA WIRE
20. AC POWER CORD

POWER SUPPLY

This unit operates from a main supply of 230V ~ 50Hz. Connect the AC power cord to the AC household main outlet. Ensure that the voltage is as indicated on the rating plate on the rear of the unit.

Battery Back-up Power Failure Protection
This radio has a battery back up circuit that will keep the correct time and alarm settings in the event of a temporary power interruption. Install a 3V CR2032 flat lithium battery (not included), into the battery compartment located on the bottom of the unit.

If power is temporarily interrupted the display will blink and the radio will not play. However, the battery back-up circuit will continue to maintain the clock and alarm settings. When power is restored the clock will display the correct time and alarm settings, and no adjustment is necessary.

Note: If power is interrupted and there is no battery in the compartment or the battery is exhausted. The time and alarm settings will be lost. When power is restored the clock will begin to flash indicating that the time and alarm settings must be corrected.

SETTING THE CORRECT TIME

1. With the Radio Off, press and hold the TIME SET button (2).
2. Press the HOUR button (6) to advance hour, press MINUTE button (4) until the correct time is displayed.
3. Release the TIME SET Button.

SETTING THE WAKE UP TIME

1. Press and hold the ALARM SET button (8).
2. Press the HOUR button (6) to advance hour, press MINUTE button (4) until the correct time is displayed.
3. Release the ALARM SET button.

WAKE TO BUZZER ALARM

1. Set the alarm time as shown above.
2. Set the ALARM SWITCH (3) to the BUZZER position.
3. Set the ALARM ON/OFF button (5) to ON (Clock icon appears).

WAKE TO THE RADIO

1. Set the alarm time as shown above.
2. Set the ALARM SWITCH (3) to the RADIO position.
3. Set the Band Selector (7) to the desired radio band, and follow

the procedure in LISTENING TO THE RADIO to tune the radio to a station.

4. Set the VOLUME Control (1) to a level you feel will wake you.

ALARM OFF FUNCTION

1. Select ALARM OFF with the ALARM ON/OFF button (5) to turn the alarm off (Clock icon disappears).

LISTENING TO THE RADIO

1. Set the ON/OFF button (12) to the ON RADIO position.
2. Set the BAND Selector (7) to the desired band (FM or AM).
3. Turn the TUNING Knob (9) until the desired station is heard.
4. Adjust the VOLUME Control (1) to a comfortable listening level.
5. To turn off the radio, set the ON/OFF button (12) to the OFF position.

Note: The MW band uses a built in directional serial. You may have to rotate the clock radio for the best reception.

SNOOZE FUNCTION

When the alarm sounds, pressing the SNOOZE Button (11) will temporarily stop about 5 minutes then the alarm sounds again.

Snooze will continue until the ALARM ON/OFF button (5) is pressed to OFF.

SLEEP FUNCTION

1. This function enables you to go to sleep listening to the Radio.
2. Set the Radio ON/OFF button (12) to OFF.
3. Press the SLEEP Button (10). The clock display will show 90 minutes. The Radio turns on and will turn off automatically after 90 minutes.
4. To select a shorter time press the SLEEP Button (10) repeatedly until the desired sleep time is displayed (90-10 minutes).
5. To turn off the Radio at any time during the Sleep period, press the Radio ON/OFF button (12) to OFF.

EXTERNAL AUDIO LINE-IN

Connect an external audio device (CD/MP3 player, etc.) in the Line-in jack (17) to amplify its sound through the Clock-radio.

DIMMER SWITCH

Select the desired display illumination with the Display LOW/HIGH Dimmer (18).

FM WIRE ANTENNA

Extend the FM wire antenna (19) completely to obtain best reception in FM band.

CARE AND MAINTENANCE

To prevent fire or shock hazard, do not allow this clock radio to be exposed to rain or moisture.

This clock radio should not be exposed to direct sunlight, very high or low temperature, moisture, vibration, or placed in a dusty environment.

Do not use abrasives, benzine, thinners, or other solvents to clean the surfaces of the clock radio. To clean it, wipe with a mild non-abrasive defergent solution on a clean soft cloth.

Never attempt to insert wires, pins, or other objects into the venlilation holes or openings on the clock radio.

Note: When setting the Clock or Alarm times remember that this clock radio has a 24 Hour clock mode.

AC POWER

For your own safety read following instructions carefully before attempting to connect this clock radio to the mains.

This unit is designed to operate on a 230V~50Hz supply only. Connecting it to other power sources may damage it.

Ensure that supply corresponds to the information on the rating label on the bottom of the unit.

SPECIFICATIONS

FM Band:	87.5 to 108 MHz
AM Band:	525 to 1615 kHz
Power Supply:	230V AC, 50 Hz
DC Back-up:	3V, CR2032 Lithium Battery

Note: Specifications and the design are subject to possible modifications without notice due to improvement.

Correct Disposal of This Product

(Waste Electrical & Electronic Equipment)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.